
1130G Chain Saw UT-1130G Page 1 of 10

PRICE .35

PRINTED IN U.S.A.

PART NO. 24528

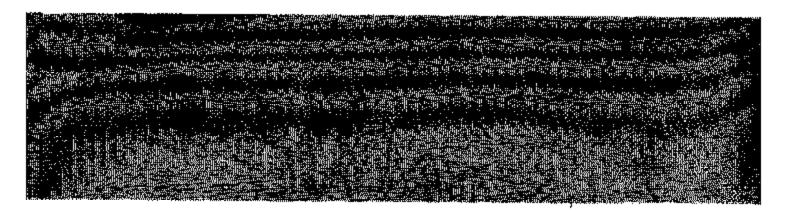

HOMELITE

1130G AUTOMATIC CHAIN SAW



1130G Chain Saw UT-1130G Page 2 of 10

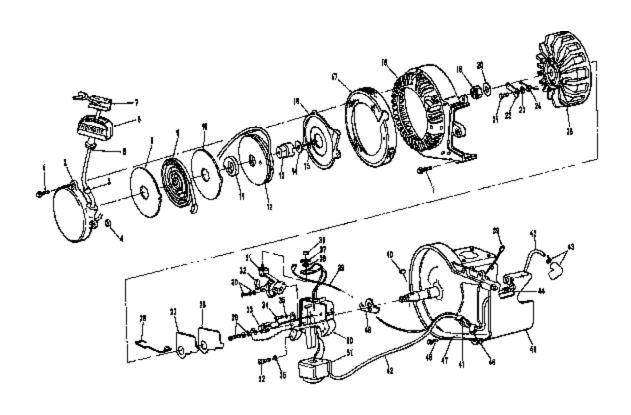


FIGURE 1

No	Description	Pert No	Qity	No	Description	Pert No	
i	SCREW hex, 12 24 x 3/4	80987	7	27	GOVER breeker box	68979	
2	COVER starter	A 64178 3	1	28	GASKET breaker box	56978 2	
-	Includes			2₽	\$CREW GROUP continuer	87750	
3	BUSHING 1999	87177	1	3D	SCREW GROUP point	67749	
ĭ	BUBHING recess outer Icon	5583D	i	31	POINT SET	A 58165	
5	ROPE Martin	50888	1		Encludes		
ě	GRIP rose	66937	Í	32	WICK	56984	
Ť	INSERT code retaining	88617	1	33	CONDENSER-w/terminal	66987	
ė	SHIELD spring (inner) [optional]	68711	1	34	50PEW-61, 10:24 x 1/2	80585	
ğ	SPRING rewind	84180 A	f	à5	WASHER lock, no. 10	83046	
10	SHIELD spring (outer) leptional)	86712	1	3B	NUT terminal	56962	
11	LDCK spring rewood	84048 A	1	37	TAB ground	66733	
12	PULCEY-starter	64050 1	t	38	WASHER terminal	66983	
13	CUP Harter	87139	1	39	LEAD ground with minute	A 58321	
14	WASHER retaining	56763	1	4D	KEY rotor	7607B	
16	8CREW hax, 10:32 x 1/2	80648	1	41	SLEEVE	6629D	
16	SHIELD swedurt	64092	1	42	LEAD high tension	58392	
17	SCREEN fan housing	66380 2	i	43	TERMINAL speck plug	A 86378 A	
18	HOUSING for	58094 1	1	44	GROMMET	8804B	
19	NUT lock, 7/16 20	8 1 104	1	48	SHIELD cylinder	A 637361	
20	WASHER für	84047	1	48	CLAMP lead	56014	
21	6TUD shoulder	84064	2	47	CRANKCASE w/pm (See Fig 2)	A 84632	
22	PAWL elector	6875B	2	48	SCREW hex, 10 32 x 3/8	809891	
23	WASHER	98851	2	48	SEAL brenker box	86282 A	
24	SPRING starter pend.	68788 1	2	5 0	BOX Breaker w/core	57744	
25	ROTOR	84063 A	1	61	DOLL w/ground terminal	66988 ★	
26	CLAMP dust cover	88680	1	B2	60REW fil, 10 24 x 7/9	80860	

1130G Chain Saw UT-1130G Page 3 of 10


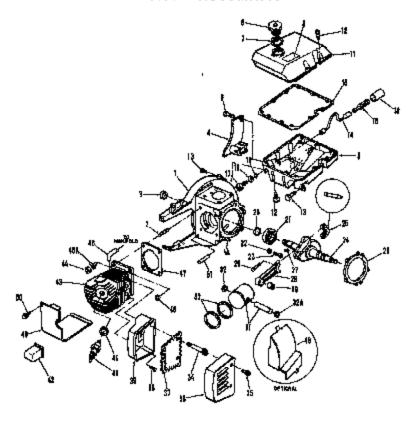


FIGURE 2

No	Description	Part No	Ωŧγ	No	Description	No. A 63071 D	o.
ſ	CRANKCASE W/pini	A 64532	1	31	PISTON and PIN	A 63071 D	
	Includ es				Includes		
14	PIN dowel	74332	2	32	RING rata ening	5 6 280	
2	STUD	72787 1	4	32A	RING retaining	64743	
3	SEAL	5830B A	1	33	PIETON RING	56291	
4	BRACKET handle ber	59635 2	1	34	STUD muffler	59992 g	
В	SCREW hex, 12 24 x 7/8	19808	1	36	SCR EW hex hd, 12 24 x3/8	\$ <u>\$</u> 0837	
Ē	CAP tenk	A 6414D1	1	*35	CAP muffler	A 84464 2	
	Insludes			37	SAFFLE muffler	89978 1	
7	GASKET	6536-8	1	39	SCREW hex, E/4 2D x B/8	90402	
	VALVE, wint (not shown)	63716	1	*39	BODY muffler	A 58927.2	
Б	DECAL murtion	64144	1	40	SPARK PLUG	63547 S	
D	TANK fuel watereen	A 67739	1		Indudes		
	l nalude.			41	GABKET	26038	
1D	GASKET fuel fenk	67877	2	42	CAP Spark plug		
11	COVER fuel tenk	59687 2	1	43	CYLINDER		
12	9C REW fill hd, 8 32 x 6/8	82146	11	44	NUT hen, 6/16 24		
13	SCREW, hex hd, 12 24 x 3/4	87887	3	46	WASHER lock, 5/16		
14	FLEXIBLE LINE	66806	l	46A	WASHER WE lock		
18	FILTER ASSEMBLY	A 56261	1	46	LINE fuel		
	Includes			47	GASKET cylinder	64483	
18	FILTER	59253	1	4B	EXCHANGER heat (option	val) 53103 1	
17 .	FITTING, fuel	83132	i	49	CYLINDER SHIELD		
18	GASKET	82175 1	1	6D	608 EW hex 6d, 10 24 x 3/4		
19	"D"RING	87900	i	51	SLEEVE		
20	RING Mining	58319 A	i				
21	BEARING ball	6B19DS	1	ACCE	SSORIES Inot shown! AVAI	LABLE FROM YOUR DEALER	
22	WASKER lock	83061	ž				
23	SCR EW bearing retaining	16238.3	2	A 635			
24	CRANKSHAFT	A 64351	ī		1 umdér eadh MUFFLER:	STUD	
25	ROLLERS set of 31	A 6467B	1	A 844	11 MUFFLER and SHIFL D.	ASSEMBLY	
28	GASKET	B3:36B	1	7,411			
27	KEY woodruff	75078	1				
28	CONNECTING ROD	A 59945	i		63565 A		
	inaludas		_				
29	SCREW 10 32 x 5/8	80345	2			STUD MUFFLER	
20	BEARING naedle	59006	1		8D402	SCREWIHEX HD 1/4 2D x 8/8	
				*Denot	tes new parts		

1130G Chain Saw UT-1130G

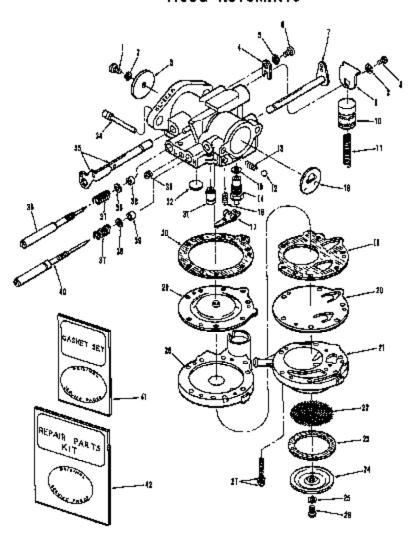

MODEL HL-222A

A-83585

Нo	Decomptson	Part No	Q\$Y	No	Deportment	Peri No	City
	6CREW rd , 4 40 x 1/4	90691	1	122	SCREEN fuel	68627	1
,	WASHER lock, no 4	83008 1	2	23	GASKET	567 51	1
•	SHUTTER throttle	7743D	f	24	CDVER atrainer	8982B	1
Ä	CLIP throssie sheft	73086	1	28	GASKET cover	28038	1
ī	WASHER lock no B	B30000	f	,12B	SCREW pover	68626	1
6	SCREW flat 8 32 x 6/16	75088	i	27	SCREW (if , 8.32 x 13/18 w/lockweither	68316	a
7	SHAFT and LEVER droke	83899	1	25	COVER dephreym	83092	1
Á	SCREW rd , 4 36 x 1/4	B0006 1	í	†29	DIAPHRAGM	57829	1
ŏ	CAM accelerating pump	64367	1	30	GASKET disphragm	57824	1
110	PUMP societrating	A 83899	1	31	NOZZLE MBIR	A 77429	1
111	SPRING pump	63894	1	t322	PLUG expension	208 18	í
τ2	BALL	26627	1	33	PLUG channel	73087	1
13	SPRING choke friedron	73284	1	34	PIN inter lever	A 66762	1
14	NEEDLE and SEAT INIST	A 64779	1	36	SHAFT and LEVER throffle	83697	1
	lockdes			36	NEEDLE idle edjusting	6888 0	1
16	BABKET	55344	£	†37	SPRING adjusting headle	72076	2
118	SPRING tension	77426	1	36	WASHER adjusting need is	76736	2
17	LEVER inlet corntrol	55747	í	39	PACKING edjusting needle	75733	2
1B	8HUTTER choks	77427	i	40	NEEDLE main adjusting	68688	ı
19	GASKET fuel pump	58529	1	'41	GASKET SET	69867	1
(2D		67729	1	*42	REPAIR PARTS KIT	69864	1
21			1		GASKET and DIAPHRAGM SET	\$3560	1
• '	Control Panip		-		luded in REPAIR PARTS KIT		
	DIAPHRAGM fuel pump BODY fuel pump	67720 69286	1	tine	GASKET and DIAPHRAGM SET	\$3500	

1130G Chain Saw UT-1130G Page 5 of 10

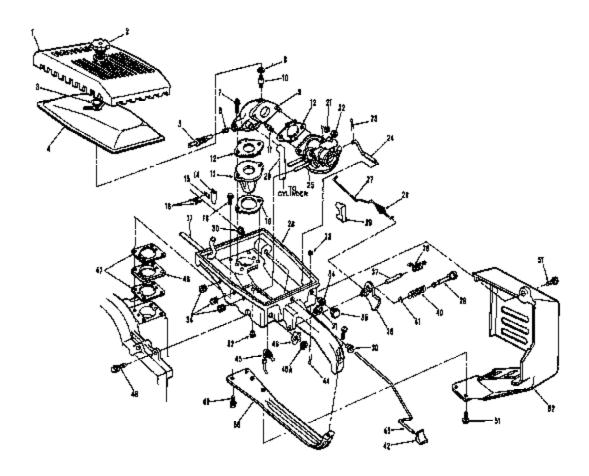


FIGURE 3

No	Ощелріня	Part No	Qty	Na	Description	Pari No	Ú.
ŧ	COVER our taiter	68230 1	1	79	STDF rod	6883D	1
2	NUT cover	A 60229	1	30	BUSHING rod	58929	2
3	RING-retening	98319 A	١ 1	91	BUSHING look pin	59054	1
4	FILTER ELEMENT air	B3726	ĭ		PLUB button (not shown)	64637	1
ē	SCREW idle adjusting	63887	1	32	PLUG button	A 64744	1
6	5PR ING adjusting screw	83884	1		Includes		
7	SCREW hex, 1/4 20 x 1/2	80882	2		"O"RING (not shown)	9 9766	1
8	GASKET stud	58392	1	33	FELT	63290	1
Ð	MANIFOLD Intake	A 83826	1	34	GROMMET	58382	4
0	BTUD cowr	68341	1	36	BUTTON rod _e	67289 1	1
11	STUD carburator	27464	2	36	TRIGGER throttle	6018 î A	1
12	BABKET carburator	63866 A		37	SHAFT trigger	58353	1
13	SEAT reed value	69827 1	1	36	SPRING throttle	68362 🖈	1
lá	REED valve	6D82D	á	39	PIN throttle lock	88404	1
15	CLAMP reed	95490	4	40	SPRING look	56466	1
l 6 '	* SCREW peri, 4.40 x 2/16	80868	8	41	RING reterring	5B4D9	1
17	LINE for	85680	1	42	BUTTON oil red	56387	•
I₽	SCR6 W hex, 12 24 x 1	80884	5	43	ROD oil pump	63127 A	1
18	GASKET specer	55946	1	44	PLM catter, 1/16 x 1/2	B63D1	1
ю	LINE foot kile	82656	1	45	\$WITCH toggle w/nvt	A 57650 3	1
Ħ	WASHER lock, 1/4	83008	2		lociudes		
72	NUT Nex, 1/4 2D	810121	2	46A	TUN	72084 A1	1
73	PIN cottor, 1/32 x 1/2	86324	1	46	PLATE "ON OFF"	720 8 5 A	
24	ROD-ahoke	A 58354	1	47	GASKET specer	88343	
16	CARBURETOR	A 83685	1	4B	SPACER throtale headle	E8391	
19	BOOT rod	58348	ı	49	SCR EW hex: 12 24 x 3/4	60967	:
77	ROD throttle	58338	1	60	BRACE throttle bandle	69186 A 1	
20	HANDLE throttle	A 63665	1	61	SCREW hox 12 24 x 5/8	80676	:
	Includes			52	SHIELD multier	83733 2	

1130G Chain Saw UT-1130G Page 6 of 10

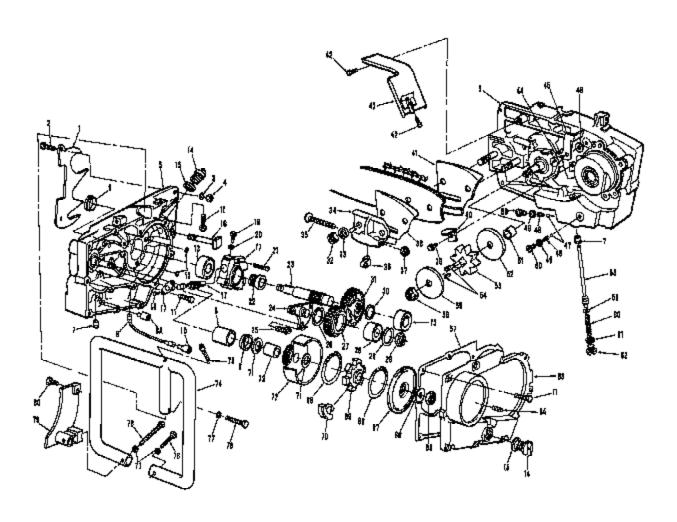


FIGURE 4

1130G Chain Saw UT-1130G Page 7 of 10

11306 AUTOMATIC

FIGURE 4

10	Смагрион	Pert No.	Qty.	No		Part No	Ċ
í	KIT springd bumper (western)	A 63453	ŀ	\$7	NUT hax look	81(23	
	Includes			36	PLATE guide ber (puter)	56957 A	
2	SCREW heat, 1/4 20 x 7/8	601813	2	38	SCREW hex TO 24 k 3/8	30869 1	
ä	WASHER book, 1/4	83009	2	40	PRACKET IN	e3110	
4	NUT 1/4 20	81063	2	41	PLATE guide ber (ironex)		
	KIT spident bumper (eastern ook shown) if			42		86958	
	(optional)	A- B3138	ı	43	5085W-Max, 12 24 x 3/6	80837	
	•			**	GUARD phym Includes	A-83779	
	Include					*****	
	BCREW hax, 1/4 20 x 3/4	802181	2		DEFLECTOR sendust [not shown)	63716	
	WASHER foot, 1/4	82 00 0	2		RIVETS (not shown)	85126	
	NUT 1/4 20	81063	2	44	SCREW DIVO	69 8 8 (
б	HOUSING past	A 63098 C	1	₽₽	BELL CRANK	6898 2	
	neluptes			4B	WASHER (Intel	83108	
4	5EAL	\$6258 A	2	47	BALL check	26527	
7	BUSHINGrad	58084	1	48	SPR(NG check vplve	59022	
	ECSOW Inot shown!	69532	1	49	GARKET check wide cap	85258	
8	BEARING	78167 8	1	\$0	CAP check valled	58339	
ŘΑ	FILTER oil (manual)	A 69118	i	61	SPACER eprocket	59697	
8	LINE oil	59674	i	5 2	WASHER sprocket (mms/)	66074	
Ď.	FILTER OF GRACOMORNI	A 64293	i	63	BPROCKET & tooch, 1/2 " pitch	568 63 3	
5	SCREW 184, 12 24 x 3/4	80667	17		Optional 7 teeth, \$/16" pitch	74481 1	
ź	"O" RING	F\$107.4	2	5- á	KEY serrocker	56078 1A	
å	BEARING bell	63507.5	2	58	WASHER specialist (owner)	15099	
4	CAP (filter (old)	A 11768 A		56	NUT hex. 1/2 20		
*		W GRUIT W	2	67	BASKET	B1 (Q1	
6	[nothers becked		_	68		63124	
О	GARKET	64607	1	00	PLUNGER	A 63112	
6	YACVE vent (not shown)	63718	1	• •	ins/cdei		
	BOLT suide ber	88334	2	49	"D"RING	74380	
?	PUMP automatic oil	A 83082	1	84	SPRING сопривым	64283	
_	ino Gudes			81	WASHER	68138	
В	SCHEW pan. 4 40 x 1/4	80919	2	87	CAP all peutop	63176	
9	BCR EW want	64102 A	1	63	DOVER poor housens	548314	
ø	GASKET	59736	5	64	PLL/G pipe	28097	
ſ	SCREW hex. 8 30 x 7/8	80568	ā	麟	NUT hax, 3/8 24	81182	
7	WORM gran	52084 A	t	88	WASHER	65038	
3	SHAFT porocket	59277 A	1	87	COVER plurch	58023 A	
4	7309 rejer 7309	68288 1A	i	88	SPEING cluses	87441	
5	SCREW hex, 1/4 20 x 3/4	83407	á	69	SPIDER clutch		
ě	RENG retaining	28922	2	70	SHOE cluich	56547 3	
7	GEAR ING	682 6 0	ī	71	WASHER (IN)	A 8751 0	
é	BEARING bell					66132	
9		72328 S	1	72	GRUM clutch wygeer	A 83123	
	NUT IN HER STORY	B7765 A		73	BEARING NAME	58803	
0	R7NYO rateIniting	63108		*74	HANDLE BAR, DVIETEZO	A 54489 2	
1	GEAR driven 3 1 retro, 64 teeth	59276 5	4		Continued what around	A 63138	
	options 2.1 racio, 42 teath	B9269 1	,		Lnclude		
₹ .	NUT hek 3/6 1B	B1088 2	2	76	6CREW 500, 5/10 18 x 1	80308	
8	WASHER /quit 3/8	83 0 28	2	16	SCREW hox, 5/16 18 x 1-1/2	80067	
	PLATE adjusting	A 58691	1	17	WASHER COCK, BY18	83003	
	(neludge			78	BCREW how, 6/18 18 x 3 1/4	\$0866 \$4866	
4	PLATE	865512	ſ	79	BRACKET handle bar	5983B 2	
	BCREW rd, 3/10 18 x 2 1/8	B2219	i	RD	SCREW hox, 12 24 x 7/8	80388	
-							

^{*}Denotes new parts

1130G AUTOMATIC

Tools

22820-2	COLLAR-main bearing installation
A- 23672	JACKSCREW-magneto
23870	PLATE-crankshaft aligning
22750	PLATE-sprocket locking
22828	PLIERS-retaining ring (pieton)
23391-3	PLUG-bearing Installation
23228	PLUG-bearing Installation
23874	PLUG-bearing installation (conn. rod)
23913	PLUG-bearing and seal installation
23233-1	PLUG-seel assembling (crankcase)
23671	PLUG-seal assembling (gear housing)
A- 24028	PULLER-magneto rotor
23138-2	SLEEVE-bearing and shaft installation
23693	SLEEVE-seal protecting
A- 24284	WRENCH-combination
23528	WRENCH-socket screw (conn. rod)
A-23696-A	WRENCH-spanner

Accessories

23742	DECAL (universal replacement) composed of "Direct Drive," "Gear Drive," "Starting Instructions"
	and two "HOMELITE" (letters 1/4" and 1/2" high).
A- 67757	HANDLE-helper
2348B-B	LOCTITE
55291-C	Olit-gear (1pt. container)


Paint

22772	PAINT-black (spray can)
23475	PAINT-red (spray cen)

1130G Chain Saw UT-1130G Page 9 of 10

Part No.	Deteription	Qty.		Part No.	Description	Qty.		Part No.	Description	Oth	۲.	Part No.	Description	•
19238-3	Screw	2		68023-A	Cover-clutch	1		63103-1	Exchanger-hast	1	A-	67619	Shoe-clutch	
22750	Plete-sprocket	ļ		5 2138	Washer	1		63107-5	Beering-ball	2		67677	Gasket-fuel tank	ε
22772	Spray Can-black	!	Д.	58165	Point Set	. !		63108	Fing-returning	1		67739	Tank-fuel	
22820-2	Collar	1			Trigger-throttle	']		63103	Washer-thrust	!	д.	67767	Handle-helper	
22828 23163-2	Pliem-reteining Sleeve	;		58195-A1	Bearing-ball	1		63110 63112	Bracket-rod	!		87900	"O" Ring	
23228	Plug-bearing	+		68308-A	Seal	- ;	M.	63115	Plunger Carroll dumo	- {		88045 86119	Grammet	
23233-1	Picg-seal			B8318-A	Ring-retaining	2	Δ.	63116	Cap-oil pump Filter-oil	- (٠	68657	Label-shain Gesket Set	
23391-3	Plug-bearing	i	Д.	58321	Leed-pround	ī		63123	Drum-c(utoh	•		68664	Repair Kit	
23475	Sorey Cen-rad	i	•	58334	Bolt-guide ber	ż		63124	Gasket	i		72084-A1		
23488-B	Lootite	i		68338	Gasket	2		83127-A	Rad-oil pump	1			Plete-on-off	
23628	Wranch	1		68339	Cap-check valvi	-		63132	Freezing-fuel	1		72328-6	Bearing-ball	
23670	Plete-shaft	1		58343	Gaskat-spaper	2	Α-	63136	Mandle Bar	1		72787-1	Stud	
23671	Plug-seal	1		5B346	Bopt rod	Ī	A.	83138	Ket-bumper	1		73067	Plup-changel	
12672	Jackscrew	ţ		58352-A	Spring-throttle	1		63176-1	Gesket-fuel	1		73075	Spring	
23683	Sleeve-seef	1		68353	Shaft-triggar	1		63290	Felt	1		73086	Chosheft	
23686-A	Wrench-spanner	1	Α.	68354	Rod-choks	1	_	83366	Gasket	1		73088	Screw-flat	
23742	Decal	?		56357	Button-out red	Ţ	Α.	83399-C	Housing-geer	1		73284	Spring-choke	
23874	Plug-bearing	1		58361	Stud-cover	1		63407	Screw-hex	3		74332	Pin-dowal	
23913	Plug	1		66362	Grommet	4		83413	Kit-bumper	1		74388	"O" Fling	
24028 24284	Pullar-rotor Wrench-comb	1		68362	Lead	!	Ą٠	63518 63547-5	Sperk Arrester	1		74491-1	Sprocket	
242 44 28038	Greket	1		58391 56393	Specer	!		63548	Spark Plug Shim	2		7507B	Key-rotor	
25412	Nut-hex	4		58392 68404	Gesket-stud	. I	Д.	83685	Carboretor	-		76733	Packing Markey	
25 627	Bell-check	3		68404 68405	Pin-thrott(s loc Spring-lock	K I	~	63590	Gasket & Dis	4		76735 281828	Washer Person pendle	
7484	Stud-carburator	2		58409	Ring-reterning	- {		63655-A	Gasket-carb	4		78167-8 77426	Bearing-needle Spring-tension	
8087	Plug-pipe	5		68617	losert-rope	- {		63858	Line-fuel	1		77427	Shutter-chake	
2B096	Gasket-cover	1		56525	Screw-cover	- ;		63657	Screw-idle adj	i	Δ.	77429	Nozzle-main	
28822	Ringretzioing	2		58528	Cover≼trainer	i		63684	Spring-adj. screw	1	-	77430	Shutter-throttle	
30618	Pług	1		68527	Screen-fuel	i	A.	63885	Handle-throttle	1			NG PARTS	
6036	Wether	1		56529	Gasket	i		83692	Cover-diaphregm	1		800061	4-36 x 1/4	
36280	Sigeve-insulating	1		59536	Needle-main	1		63694	Spring-pump	1		80087	5/18-18 x 1 1/2	1
35291-C	Dul-gear	1		58547-3	Spider-clutch	1	A.	83696	Pump	1		80181-3	1/4-20 x 7/8	
6316	Screw	В		58 68 0	Needle	1		63697	Shaft & Laver	1		80218-1	1/4-20 x 3/4	
25344	Gasket	1		58756	Pewl eterter	2		83888	Shaft & Lever	1		80308	B(16-18 x 1	
88373-A	Terminal	1		58768-1	Spring	2		83716	Deflector	1		80345	10-32 x 5/9	
56551-2	Plate	1		58763	Wester	1	Д.	63717-A	Cap-oil filler	2		80568	3-32 x 7/8	
55552-1 55591	Pin Blata advertion	1		58806	Ropesterter	1		63718	Velve-check			80591	4-40 x 1/4	
56693-3	Plate-adjæting Sprocket	4		58851 58929	Weetser	2		63728	Filter Element	1		80595	10-24 x 1/2	
55680	Line-fuel	i		58930	Bushing Stop-rod	1		63733-2 63735	Shield-muff(er	7		80402 80648	1/4-20 x 5/8 10-32 x 1/2	
55733	Tab-ground	i		59022	Bring	ź		63736-1	Cap-spark plug Shield-cylinder	4		80658	4-40 x 3/16	
56747	Lever	i		58Q64	Bushing-rod	2		63778	Buero-chain	4		80680	10-24 × 7/8	
55751	Gasket	i		59074	"O"Ring	Ž		63628	Manifold-intake	4		80676	12-24 x 5/8	
55762	Pin-infet lever	i		890941	Housing-fan	ī		83855-A	Serew-shoulder	á		80688	6/18-18 x 3 1/4	_
55806	F(excble Line	1	Α.	58229	Nut-cover	i		64049-A	Lock	7		80837	12-24 × 3/8	
56937	Grip-rope	1		59230-1	Cover-eir	i		64050-1	Pulley	Ť		80884	12-24 x 1	
8846	Gasket-apacer	1		B9250	Gest-idler	1		84062	Shield-sew dust	1		80687	12-24 x 3/4	
5978-2	Gasket	٦	Д.	59251	Filter Assembly	y 1		64053-A	Rotor-magneto	1		80869-1	10-32 x 3/8	
56979	Cover	1		59253	Filter	1		84064	Stud-shoulder	2		6D682	$1/4-20 \times 1/2$	
559BO	Clip-cover	1			Post-idler geen	1		64102-A	Screw-cem	1		60691	12-24 x 7/8	
5982	Nut-terminal has	: 1		59265	Body-fuel pum	₽ 1	A.	64140-1	Cap tenk	!		80 9 19	4-40 x 1/4	
E9B3	Washer	1		59276-1	Geen-driven	1		84144	Decal-caution	1		B1013-1	Nut-1(4-20	
5984	Wipter	1		59277-A	&haft-sprocket		Α.	64178-3	Cover starter	1		B1053	Nut-1/4-20	
8986-A	Coll	1		59293	Spring	1		84180-A	Spring-rewind	ļ		61088-2	Nut-3/8-16	
50B7	Condenser]		59296-1	Gear-driven]		64293	Fifter-cul	7		B1101	Nut-1/2-20	
8014	Clamp-lead Washer-anner	1		69338	Rod-throttle	1	Α.	64351	Crenksheft Company	1		B1 104	Nut-7/16-20	
6074 8076-1A	Kev-sprocket	2		59532 59 69 1	Elbow-osl line	1		84367 64408	Cam-pump Cap-muffler	4		61123	Nut-5/16-18	
6077	Washer-outer	1		59592	Screw-pivot Belicrenk	4		84409-2	Shield-muffler	i		B1192 B2146	Nut-3/8-24 8-32 x 5/8	
8132	Washer-thrust	ż		59606	Bearing-needle	1	Δ.	B4410	Body-muffler	i	•	82219	5/18-18 x 2 1/8	
6256-A	Seal-shaft	2		59627-1	Seat-read valve			64411	Muffler & Shield	i		B3000	Washer-no 8	ř
6290	Ainp-reteining	ī		68628	Read-valve	4		64453	Gasket-cylinder	1		83002	Wesher-fock	
8291	Perton Ring	Ż		59629	Clamp-resci	4		64464-2	Cep-muffler	7		83003	Washer-6/16	
8292-A	Spel	1		59631-4	Cover	Ť		64468-2	Handle Bar	1		8300B-1	Washer-no 4	
8603	Bearing-slasva	1		59635-2	Bracket	ż	A-	64632	Crankcase	1		83009	Washer-lock	
6607	Gasket	1		59574	Line-od	Ī		64607	Plug-button	1		B3018	Washer-(ock	
8956	Plate-guide bar	!		59687-3	Cover-fuel tenk	ιĺ	A.	84779	Needle & Seat	1		83046	Washer-fock	
6987-A	Plate-guide bar	1		58 8 97	Spacer-sprocks	t Í		66368	Gmket	1		83061	Washer-lock	
372B9-1	Button-rod	1		69730	Gesket	1		66367-1	Washer-tab lock	1		B4047	Washer-flat	
57850-3	Switch	!		59765	"O" Ring	1	_	85390-2	Screan	1		86125	Rivet	
37729	Diaphragm	1		- 59927-2		. 1	A	85571	Cylinder	1		B6301	P(n-coater	
57744 57749	Box-breaker	-	Д.	58945	Connecting Ro			88711	Shield-Spring	1		66324	Pin-cotter	
	Screw Group	!		59978-1	Befile-muffler	ŧ		65712	Shield-outer	1				
	Danates Consult													
57.7BO	Screw Group	1		59982-B		3		86830	Bushing	2				
	Screw Group Nut⊣dier geer Gesket	1	Ą.	63071-D		3		86830 67139 87177	Bushing Cup-starter Bushing	1				

1130G Chain Saw UT-1130G Page 10 of 10

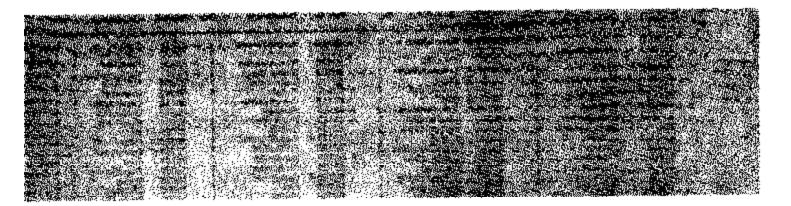

11740

